

GROHE EUROSTYLE COSMOPOLITAN

Great design and great performance are at your fingertips with the Eurostyle Cosmopolitan range. From the appealing lozenge-shape of the lever to a choice of dynamic spout shapes, Eurostyle Cosmopolitan has a solution for every type of kitchen environment.





GROHE EUROSTYLE COSMOPOLITAN

Low, medium or high spout, a pull-out mousser or an extractable mousseur spray option, even a model perfect for installation below a kitchen window – the Eurostyle Cosmopolitan offers design options that you'll love with the great GROHE performance you'd expect.



33 975 002
Sink mixer high spout
31 127 002
for open water heater



33 977 002
Sink mixer low spout
33 984 002
for open water heater



31 126 002
Sink mixer high spout
with pull-out mousseur



NEW

31 482 002
Sink mixer high spout
with pull-out mousseur spray



30 221 002
Sink mixer high spout



31 124 002
Sink mixer medium spout
31 154 002
for open water heater




31 159 002
Sink mixer
pre-window



31 153 002
Sink mixer medium spout
with shut-off valve



33 982 002 + 18 383 002
Sink mixer
wall-mounted
with tray

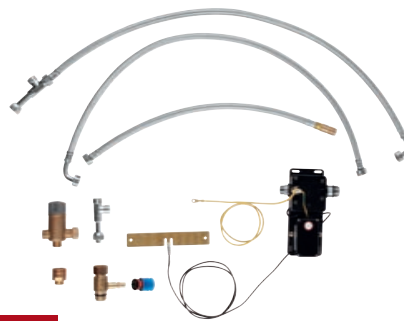

NEW

30 309 000
Retro-Fit set
for upgrading any GROHE pull-out kitchen
faucet with FootControl technology



40 535 000
Cosmopolitan soap dispenser
for liquid soaps
storage bin 0.4 l



GROHE
SilkMove®



GROHE
StarLight®



Pull-Out
MousseurSpray



Pull-Out
Mousseur



OpenWater
Heater



Stop
Valve



Pre
Window



Comfort
Height



Swivel
Stop



Forward
Rotating
Lever



Easy
Dock