


# GROHE EUROSMART COSMOPOLITAN

Simplicity is at the heart of good design and functionality. That's why GROHE's Eurosmart Cosmopolitan range focuses on the essentials to create a collection with durable details and architectural edge.

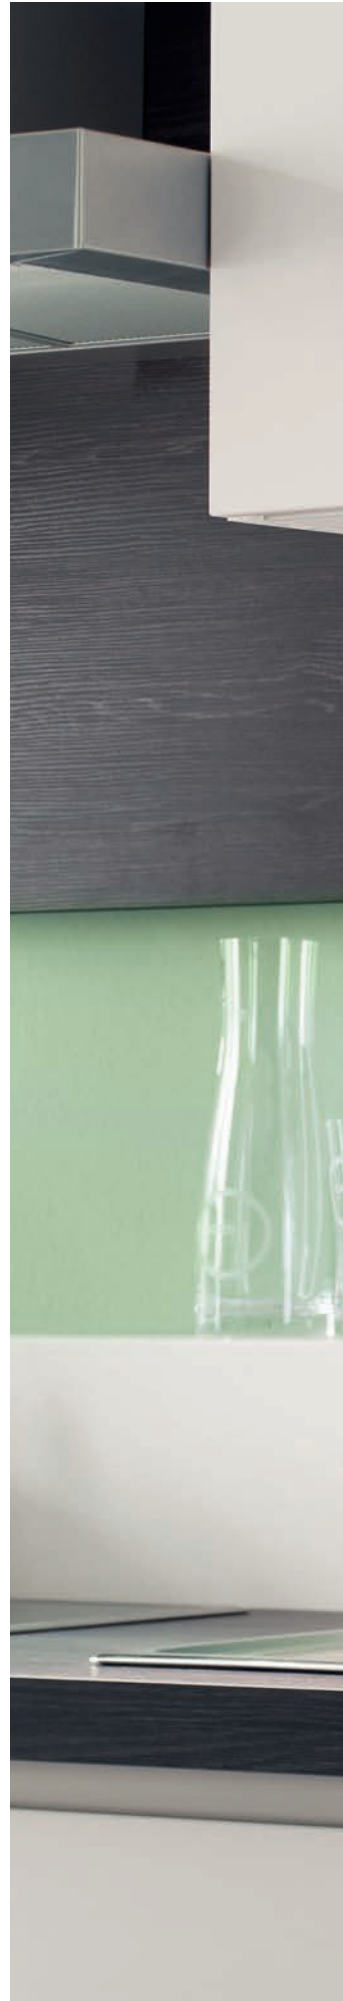



# GROHE EUROSMART COSMOPOLITAN

Put ergonomics and architectural lines centre-stage in your kitchen with Eurosmart Cosmopolitan. With this range simplicity doesn't mean lack of choice – from the three height options to the user-friendly swivel spout or an extractable mousseur spray you'll find a solution to suit you and your own contemporary kitchen.



**32 843 000 / 32 843 DC0**

Sink mixer high spout

**32 843 00E**

with GROHE EcoJoy

**31 180 000**

for open water heater





NEW

**31 481 000**  
Sink mixer high spout  
with pull-out mousseur spray



**30 193 000 / 30 193 DC0**  
Sink mixer medium spout  
**30 194 000 / 30 194 DC0**  
for open water heater



**30 195 000**  
Sink mixer medium spout  
with shut-off value




**32 842 000**  
Sink mixer low spout  
**32 842 00E**  
with GROHE EcoJoy  
**31 179 000**  
for open water heater



**31 170 000**  
Sink mixer low spout  
pre-window



**31 161 000**  
Sink mixer low spout  
shut-off value

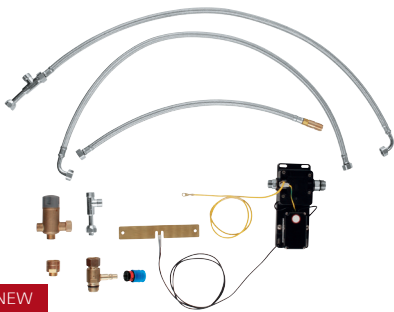

NEW

**30 309 000**  
Retro-Fit set  
for upgrading any GROHE pull-out kitchen  
faucet with FootControl technology



**40 535 000 / 40 535 DC0**  
Cosmopolitan soap dispenser  
for liquid soaps  
storage bin 0.4 l

**Colour options:**

● 000 | StarLight Chrome | ● DC0 | SuperSteel



GROHE  
EcoJoy



GROHE  
SilkMove®



GROHE  
StarLight®



Pull-Out  
MousseurSpray



OpenWater  
Heater



Stop  
Valve



Pre  
Window



Comfort  
Height



Swivel  
Stop



Easy  
Dock

